

Outdoor Cooker Safety Precautions

WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS COULD RESULT IN FIRE, EXPLOSION, BURN HAZARD OR CARBON MONOXIDE POISONING WHICH COULD CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



USE ONLY OUTDOORS and **NOT** for commercial use.




DO NOT use under any overhang or roof. Keep a minimum clearance of 10 ft. on all sides of the cooker



DO NOT use on combustible surfaces. Operate on firm level surfaces. Keep grill clear and free from materials that burn.



ALWAYS keep children, pets and any unauthorized persons away from cooker

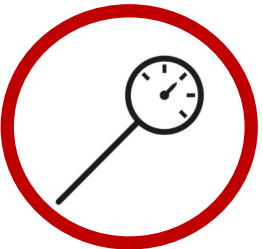

ALWAYS use a deep fry thermometer to monitor the temperature of the grease while frying and preheating.



ALWAYS wear shoes while cooking. Keep hair and clothing from coming into contact with the cooker while in use or still hot



NEVER LEAVE COOKER UNATTENDED While in use or still hot




ALWAYS wear protective mitts and use extreme caution not to splash hot oil.



ALWAYS turn the burner **OFF** when cooking is complete. Do not use as a heater.



NEVER cover the disc while frying or preheating

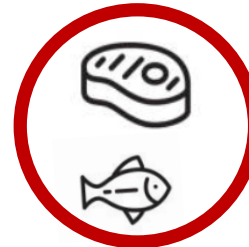

ALWAYS thaw and dry food completely before cooking with oil or grease



NEVER fry a turkey in the cooker